



Power

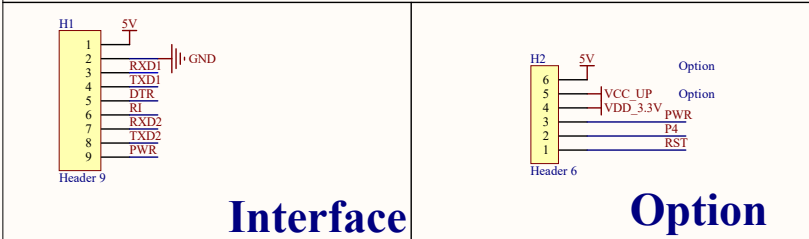


Interface

Option

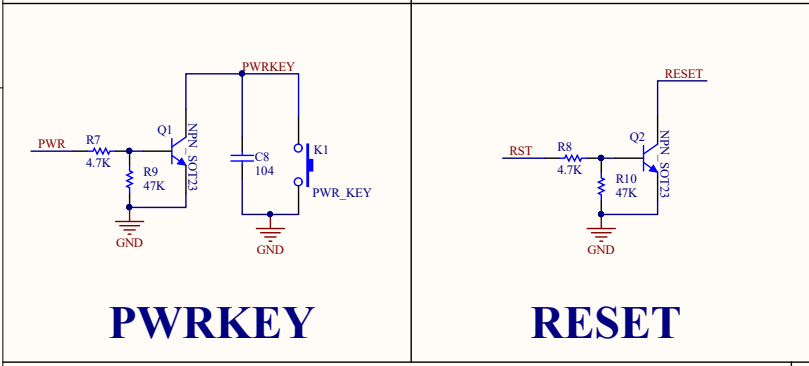


PWRKEY


RESET

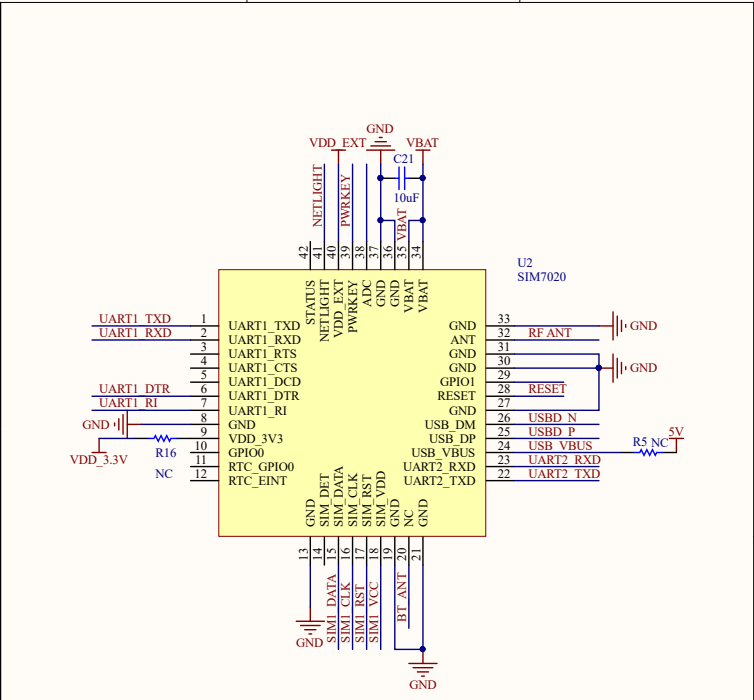

USB

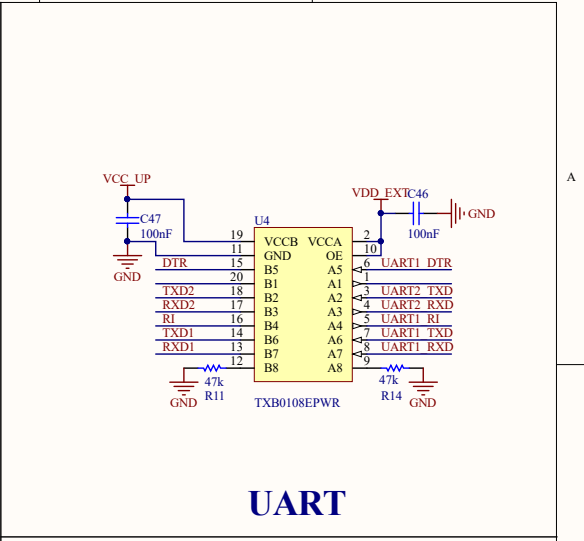


UART


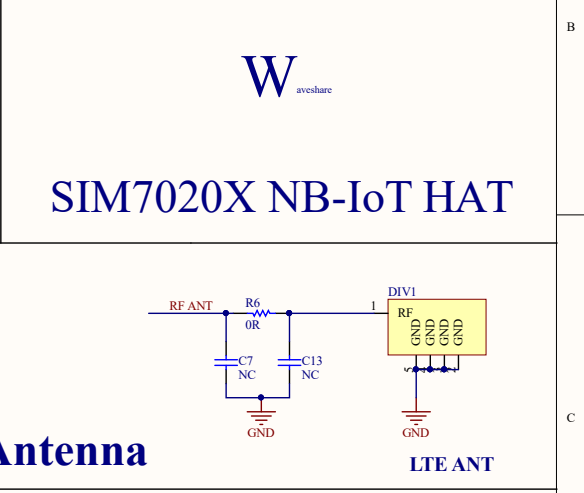


Antenna

LTE ANT

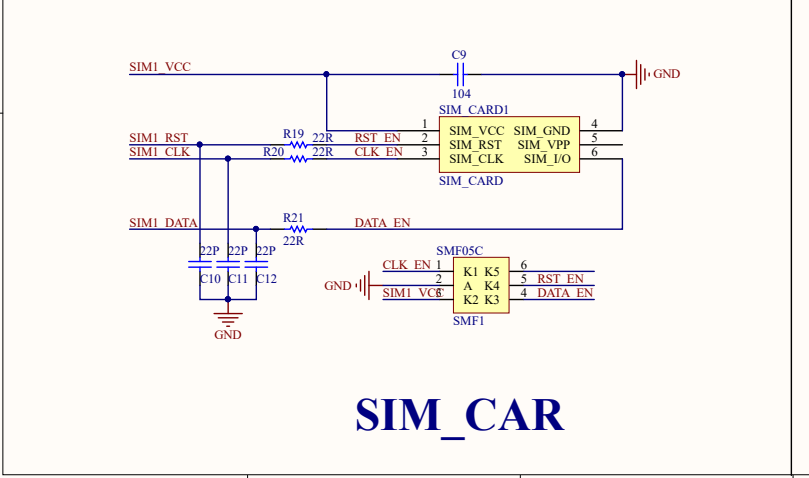

SIM_CAR

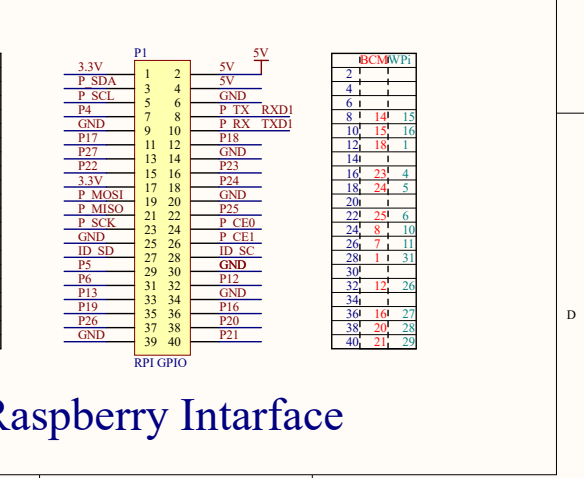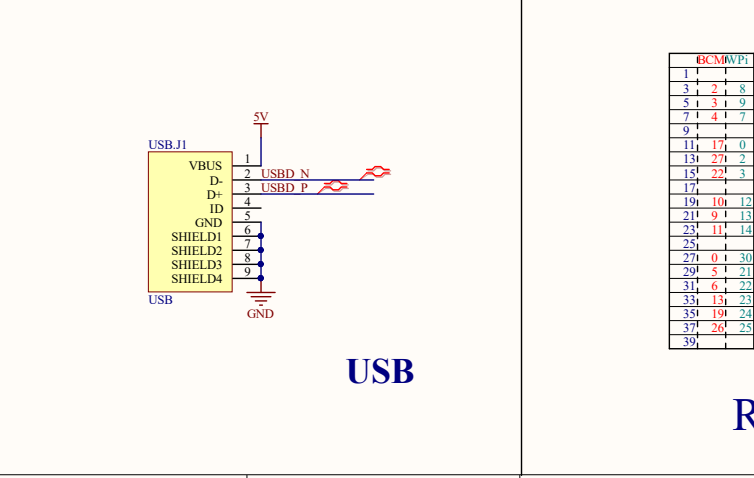

Raspberry Interface